

Exige V6 S3 Rear Diffuser Surround Fitting Guide

R01SB0482


Introduction

This part is required to fit our extended carbon diffuser which improves down force and also further reduces drag. The part features cnc machined carbon side grille vents to let out hot air radiated from the exhaust.

Please if Dyno testing the car remove this part and any carbon mid floor or diffuser fitted as there is a danger without air flow the carbon could ignite.

Parts Available:

[R01SB0482](#) Exige V6 S3 Rear diffuser surround

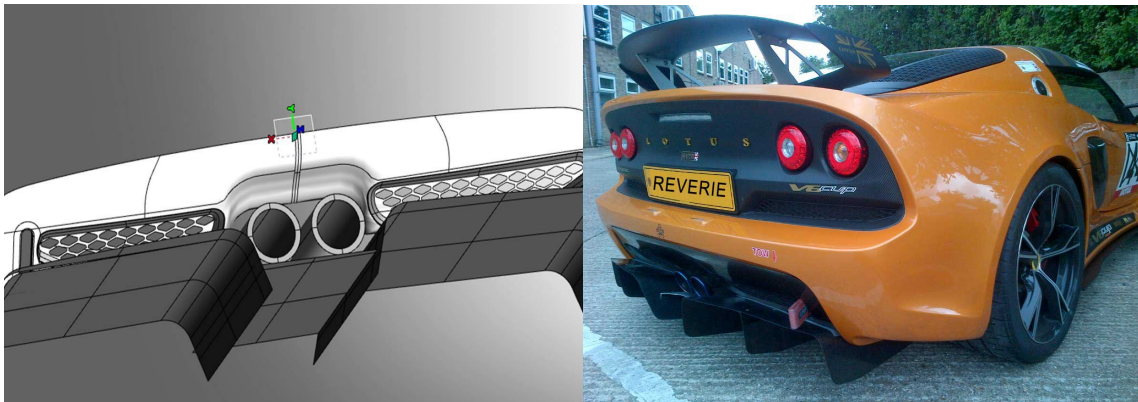

LOTUS DISCLAIMER

Although ReVerie Limited supply parts for use with/on vehicles manufactured by Lotus Cars Limited, ReVerie Limited is in no way connected to Lotus Cars Limited or any other member of the Lotus Group of companies ("Lotus") and is entirely independent of Lotus. Accordingly, none of the products offered for sale or supplied by ReVerie Limited (nor any advice or service offered or provided by ReVerie Limited) are in any way endorsed by Lotus and Lotus has not tested or approved any such products or services. Accordingly, Lotus shall not under any circumstances be liable for any loss, claim, damages or any consequential, indirect or special damages whatsoever arising out of or in connection with the use of products sold or supplied by ReVerie.

Tools Required

10mm spanner

Drill and metric drill bits set 3-10mm

Nutsert or Rivsert insert gun to fit alloy inserts to chassis rails

Metric allen key set

Sandpaper and block of various grits

Parts supplied

R01SW6183	6 off 2 lug M6 threaded anchor nuts
R01SW6146	12 off 3/32" c/sunk 8mm long rivets for anchor nuts above.
R01SW6416	6 off M6 x 16 s/steel button head screws
R01SW6079	6 off M6 x 13.5mm washer



1. Handbrake on
Jack up the car carefully as per lotus handbook instructions and support on four axle stands safely. Caution vehicle very rear weight heavy.

We find it is better to jack up with a low jack and 40mm spacer under the rear wishbones, then support the rear wheels with steel ramps.




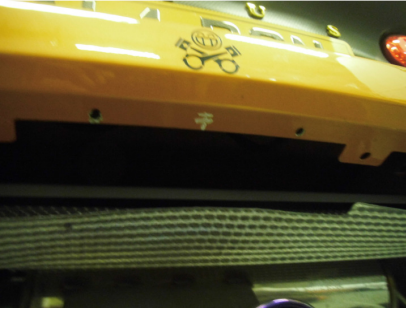



2. Unbolt the OEM rear diffuser to allow access to the Rear upper diffuser surround trim bolts and rivets.




3. Unbolt and remove this centre diffuser hanging bracket



4. Now unbolt the one lower bolt each side and the 5 upper bolts and carefully drill out the upper diffuser surround fixing rivets. Also remove any parking sensors if fitted, these cannot be refitted to our Reverie part (unless you do your own custom modification).

	<p>5. Rear OEM diffuser surround shown off the car</p>
	<p>6. Existing Lotus fixing holes shown at top where M6 threaded anchor nuts have to be fitted.</p>
	<p>7. Now you need to fit the supplied anchor nuts where the original top 5 bolt holes were. Drill counter sunk rivet holes and fit the anchor nuts on the back of the fibreglass using 2.4mm c/sunk rivets supplied.</p>
	<p>8. M6 bolts and washers shown in position loose ready to slide on new rear diffuser surround</p>
	<p>9. Rear diffuser surround shown with top slots to slide onto upper 5 off M6 bolts. Once in position tighten bolts fully, very difficult to get at!</p>

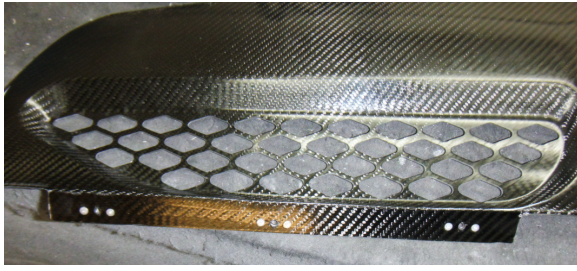

10. Rear diffuser fixings in diffuser support panel, 3 each side. Once installation complete, carefully lower the vehicle to the ground for use.

Never rolling road tune the vehicle with a Carbon mid floor, diffuser or diffuser surround fitted as these parts may become hot and ignite without cooling airflow normally present.

WARNING, MOTORSPORT OR DRIVING CAN BE DANGEROUS RESULTING IN DEATH OR PERSONAL INJURY.

READ OUR FITTING INSTRUCTIONS CAREFULLY

This article is sold without warranty expressed or implied. No warranty or representation is made as to this product's ability to protect the user from injury or death. The user assumes that risk. The effectiveness, warranty and longevity of this equipment are directly related to the manner in which it is INSTALLED, USED, and/or MAINTAINED. THE USER ASSUMES THE RISK.

FITMENT OF REVERIE PRODUCTS TO AUTOMOBILES THAT ARE SUBJECT TO A MANUFACTURER'S WARRANTY MAY VOID THE MANUFACTURER'S WARRANTY AND THE VEHICLES ABILITY TO MEET EMISSION OR OTHER TRANSPORT REGULATIONS.

By purchasing this product and opening the packaging, purchasers expressly acknowledge, understand and agree that they take, select and purchase these REVERIE products from REVERIE, its affiliates, distributors, and agents (collectively, REVERIE) "as is" and "with all faults". The entire risk as to the quality and performance of these REVERIE parts is with the purchasers. Should the goods prove defective following their purchase; the purchasers assume the entire cost for all necessary servicing or repair or any resulting liability. Working on your car can be a dangerous activity. If you are unsure of what you are doing, please leave mechanical or Safety critical work to a skilled mechanic.

We take no responsibility for the incorrect use and / or installation of REVERIE products.

WWW.REVERIE.LTD.UK

UV-PROTECTION

Please Note Epoxy Pre-preg products are not UV stable. Texallium products are particularly liable and can yellow in only 2 – 6 weeks. The epoxy resin will 'yellow' with prolonged exposure to UV radiation and material strength properties will slowly deteriorate. We recommend exterior products or those exposed to constant UV are either regularly treated with UV polish or screens such as Armour-all or 606 protectant or colour painted or at least Lacquered. We use predominately 2K car lacquers of medium solids, the DBS range has been found very suitable, although people have had equally good results with Urethanes varnishes and epoxy clear coats.

The surface should be sanded with 180, 240 then 320 grit and a cleaning solvent used to remove grease or dirt prior to paint application. Several coats may be required (normally 3 to 4 light coats) to avoid pin-holing, common with painting composite products. Pin holes may be dubbed in carefully with a brush, then wet flattened for a final application of 3 thin coats.

Let air dry only, you may stove the paint at 70°C once fully air dried.