




FITTING GUIDE

LOTUS EVORA GT/SPORT 410/GT410 SPORT/GT410 (17 - 21) CARBON FIBRE FRONT SPLITTER

PART #: R01SB0660, R01SB0661

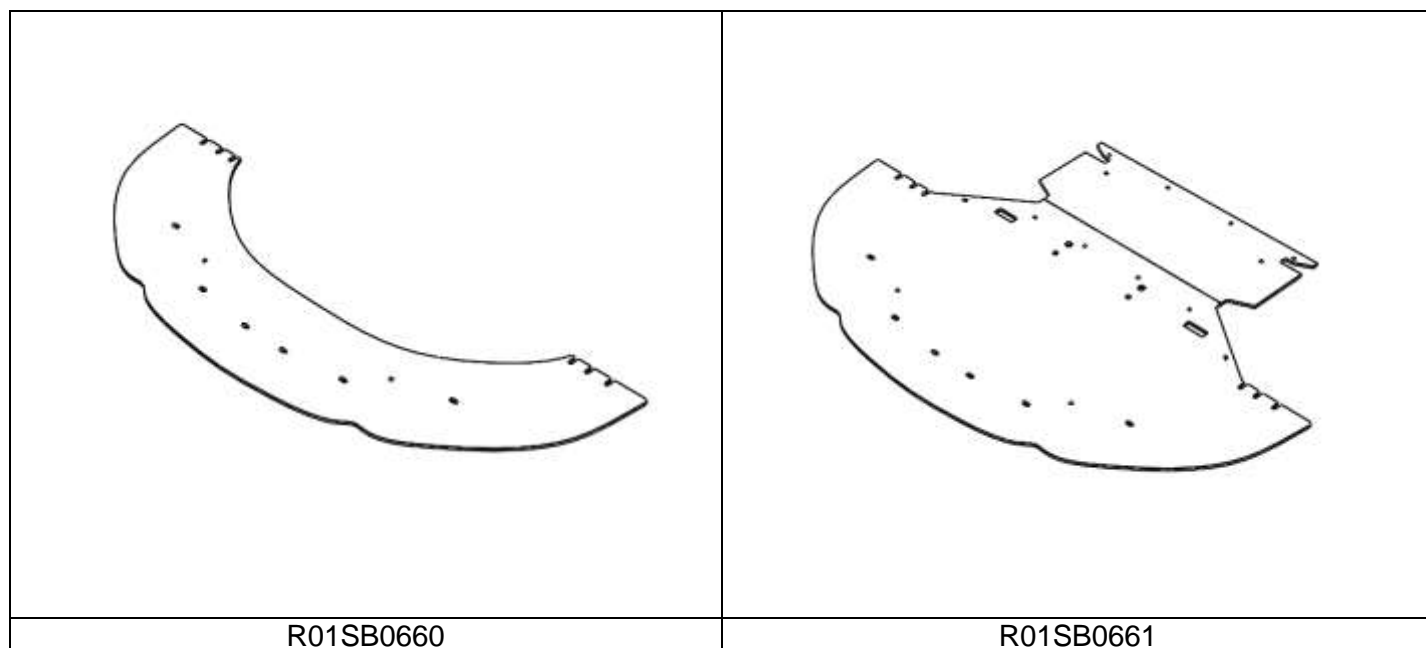

CONTENTS

0	KIT CONTENTS/TOOLS REQUIRED.....	2
0.1	R01SB0660.....	2
0.1.1	TOOLS REQUIRED	2
0.2	R01SB0661	3
0.2.1	TOOLS REQUIRED	3
1	R01SB0660 FITMENT.....	4
2	R01SB0661 FITMENT.....	7

DISCLAIMER






Although ReVerie Limited supply parts for use with/on vehicles manufactured by Lotus, ReVerie Limited is in no way connected to Lotus or any other affiliation and is entirely independent of Lotus. Accordingly, none of the products offered for sale or supplied by ReVerie Limited (nor any advice or service offered or provided by ReVerie Limited) are in any way endorsed by Lotus and has not tested or approved any such products or services. Accordingly, Lotus shall not under any circumstances be liable for any loss, claim, damages or any consequential, indirect or special damages whatsoever arising out of or in connection with the use of products sold or supplied by ReVerie.



0 KIT CONTENTS/TOOLS REQUIRED

0.1 R01SB0660

- Please check you have all the kit contents before proceeding with the installation

ITEM	ReVerie PART #	QTY	IMAGE
Carbon Fibre splitter	-	1	
M6 x 30mm CSK bolt	R01SW6423	12	
M8 x 30mm CSK bolt	R01SW6437	2	
M6 top-hat insert bush	R01SW6339	12	
M8 top-hat insert bush	R01SW6693	2	






0.1.1 TOOLS REQUIRED

- No specialist tools required. Allen key suitable for M6 and M8 bolts



0.2 R01SB0661

- Please check you have all the kit contents before proceeding with the installation

ITEM	ReVerie PART #	QTY	IMAGE
Carbon Fibre splitter	-	1	
M6 x 30mm CSK bolt	R01SW6423	16	
M8 x 30mm CSK bolt	R01SW6437	8	
M6 top-hat insert bush	R01SW6339	16	
M8 top-hat insert bush	R01SW6693	8	

0.2.1 TOOLS REQUIRED

- No specialist tools required. Allen key suitable for M6 and M8 bolts

1 R01SB0660 FITMENT

- 1 Raise front of the vehicle and support on jack stands.
- 2 Remove existing front splitter/spoiler/under tray from vehicle;




- 3 Place the 2x M8 CSK bolts into their retrospective M8 top-hat insert bushes;






- 4 Hold splitter up to the vehicle and bolt 2x M8 CSK bolts in place in locations shown;

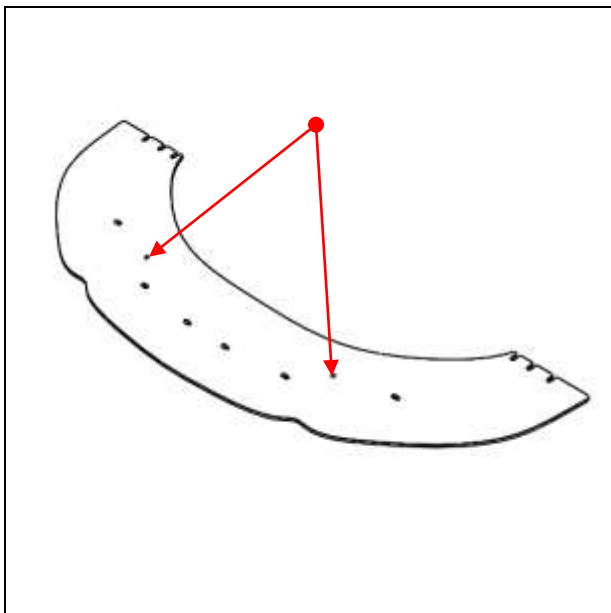

- 5 Place the 12x M6 CSK bolts into their retrospective M6 top-hat insert bushes;



6 Bolt the 12x M6 CSK bolts in location shown;

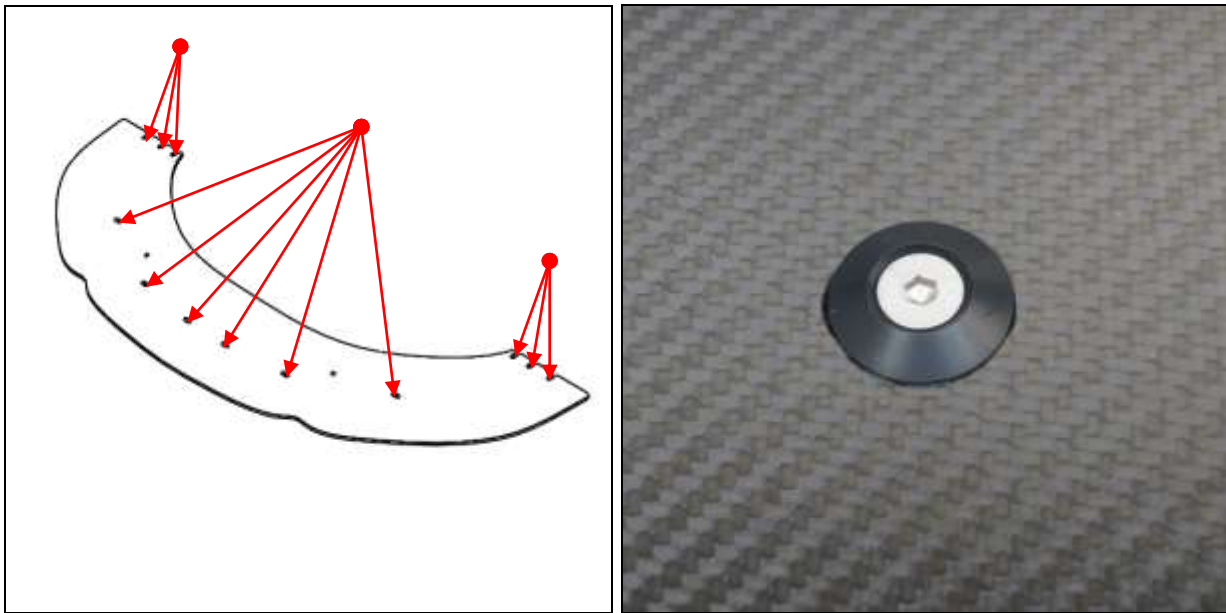

7 Ensure all bolts are tight.

8 Lower the vehicle to the ground.




2 R01SB0661 FITMENT


- 1 Raise front of the vehicle and support on jack stands.
- 2 Remove existing front splitter/spoiler/under tray from vehicle;




- 3 Place the 8x M8 CSK bolts into their retrospective M8 top-hat insert bushes;

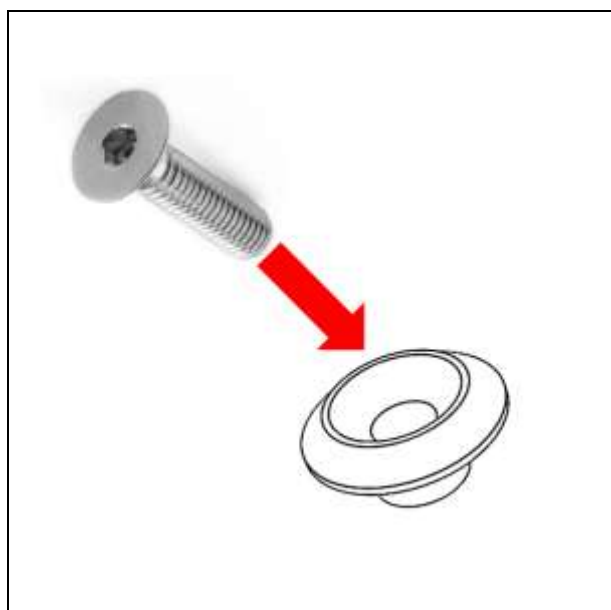



- 4 Hold splitter up to the vehicle and bolt in place in 8x locations shown (start with the middle four followed by the front two then finish with the rear two);

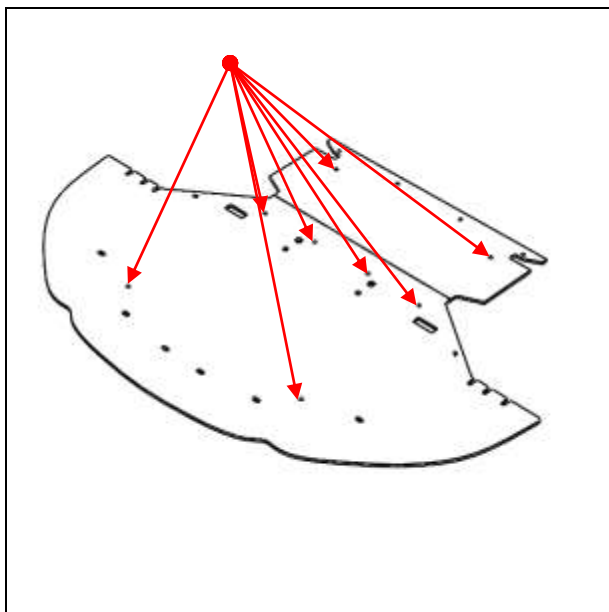

- 5 Place the 16x M6 CSK bolts into their retrospective M6 top-hat insert bushes;

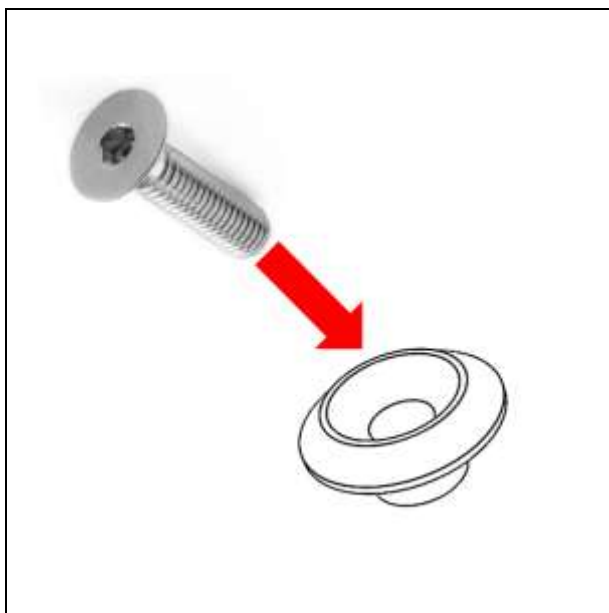

6 Bolt the 16x M6 CSK bolts in 16x locations shown;

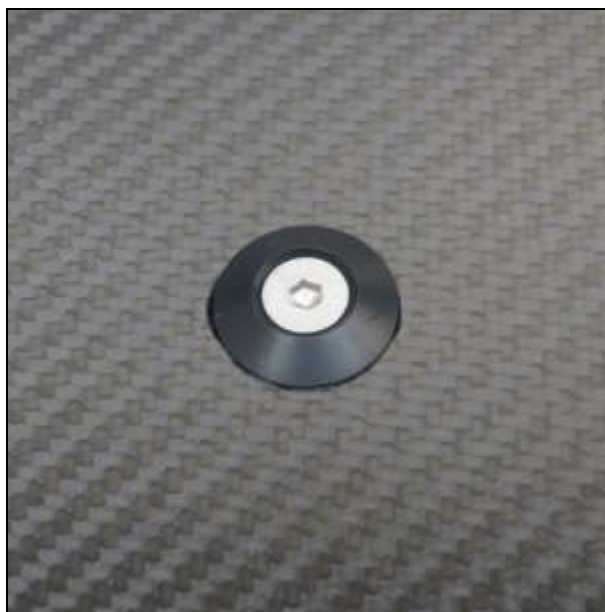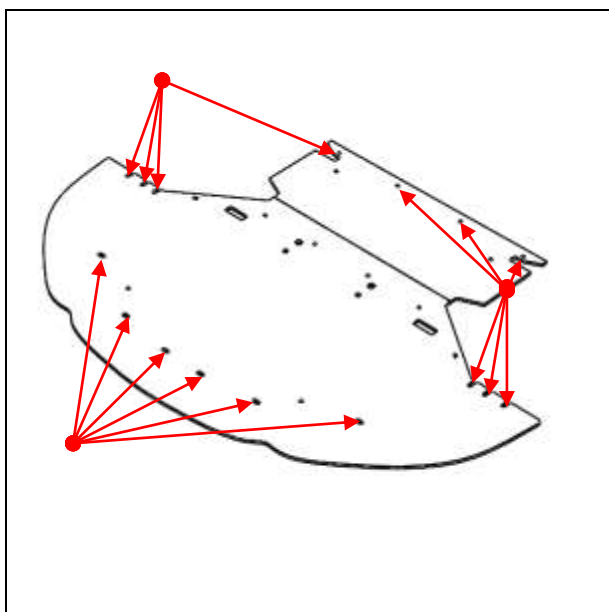

7 Ensure all bolts are tight.

8 Lower the vehicle to the ground.

