


## MULSANNE C / B LATERAL HEAD RESTRAINT FITMENT GUIDE


### R01SI0043

**A.**

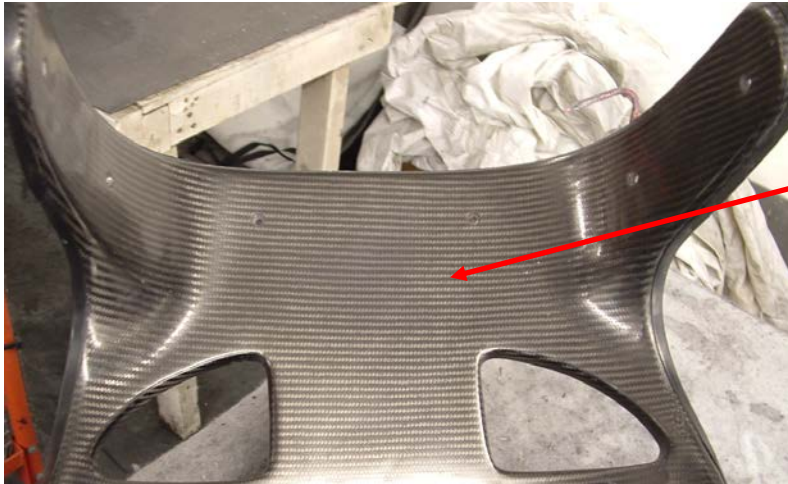


PLACE THE HEAD  
RESTRAINT FRONT HALF  
ON TO YOUR EXISTING  
MULSANNE C / B SEAT

**B.**

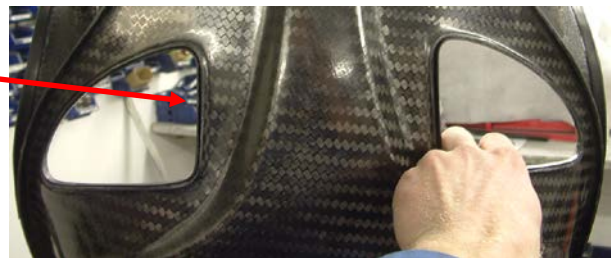


THE HARNESS HOLE'S ON THE  
SEAT AND HEAD RESTRAINT  
FRONT HALF INTERLOCK,  
GIVING POSITIVE LOCATION.

**C.**

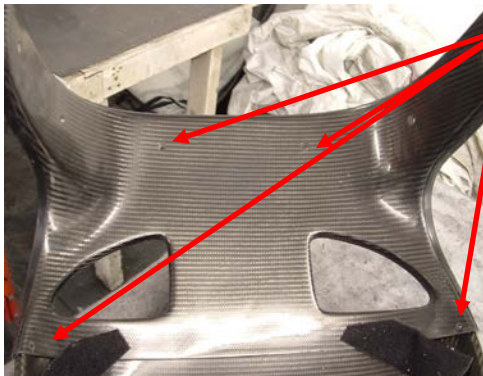


WITH A MARKER PEN (A WHITE PAINT PEN  
IS IDEAL) MARK THROUGH THE FOUR  
HOLE'S INDICATED ON TO THE SEAT.  
REMOVE THE HEAD RESTRAINT FRONT AND  
PILOT DRILL WITH A 3mm DRILL BIT  
THROUGH THE SEAT WHERE MARKED.

**D.**

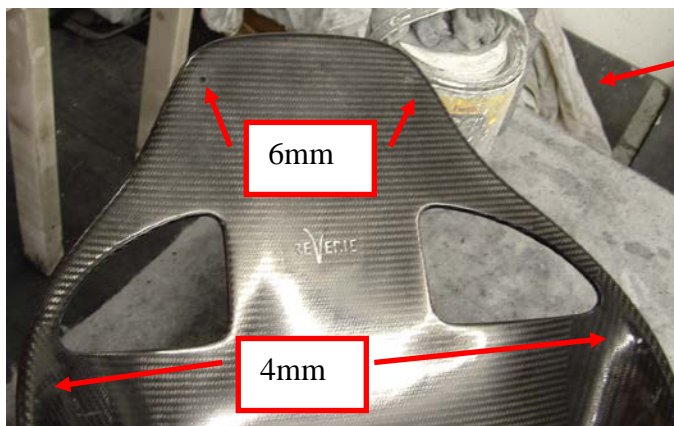


THE PILOTED HOLES  
SHOULD NOW BE  
OPENED UP TO THE  
INDICATED  
DIMENSIONS

PLACE THE FRONT HALF OF  
THE HEAD RESTRAINT BACK  
ON TO THE SEAT FOLLOWED  
BY THE BACK HALF, THE  
HOLES IN THE HEAD  
RESTRAINT HALVES AND  
SEAT SHOULD ALL LINE UP.

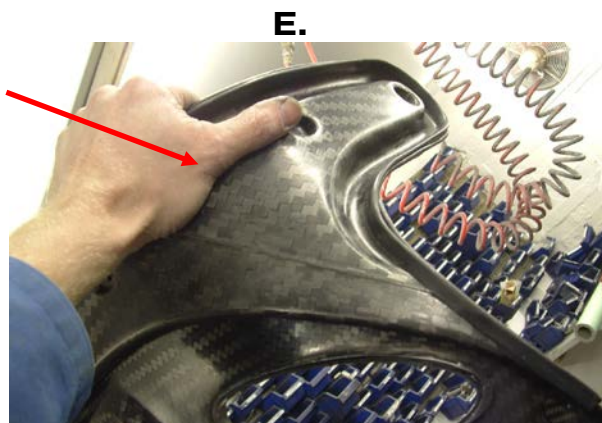

**F.**

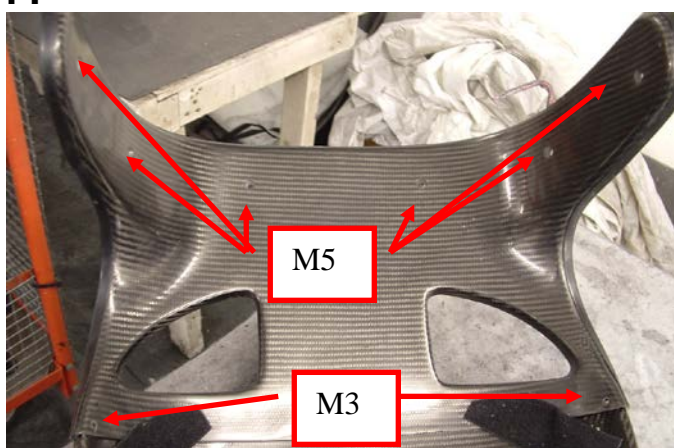

YOU CAN NOW BOLT THE  
HEAD RESTRAINT HALVES  
TO THE SEAT WITH THE  
FASTENERS PROVIDED